 
 



In the box

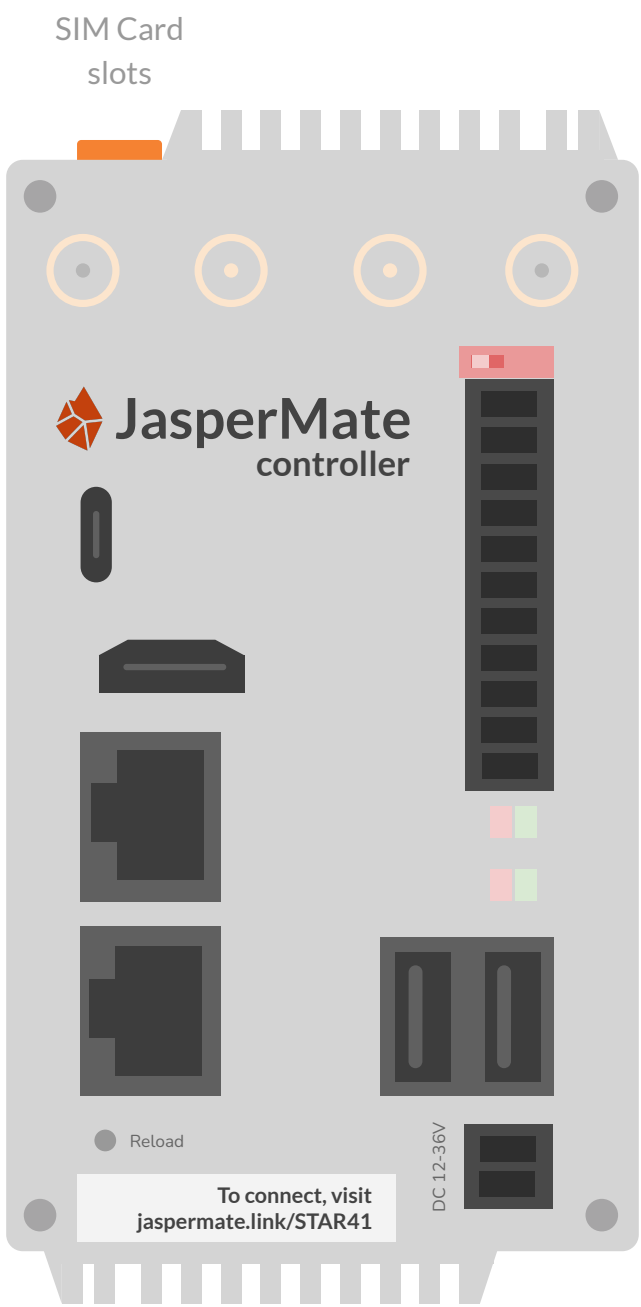

JasperMate
Controller

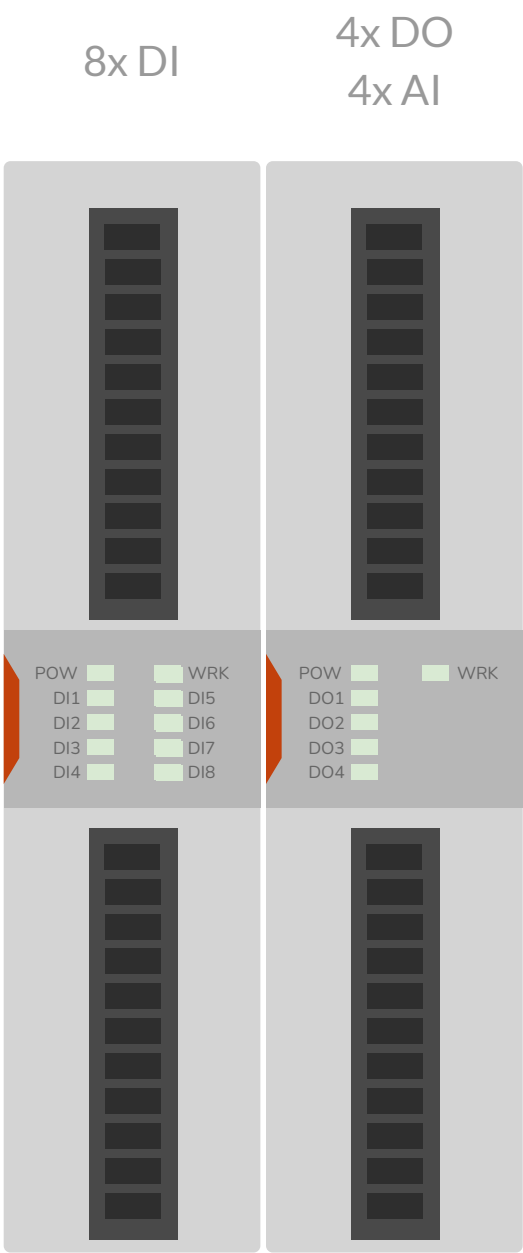

 I/O Cards
8DI & 4DO 4AI

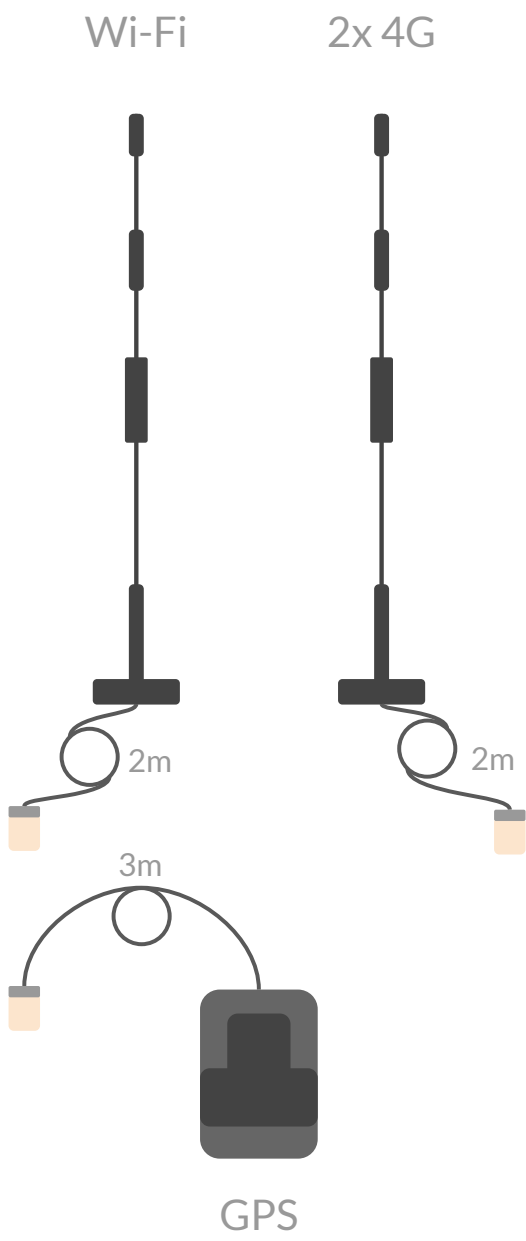


Antennas
Wi-Fi, 2x 4G, GPS




1M Ethernet
Cable

 1. Put together and power up JasperMate

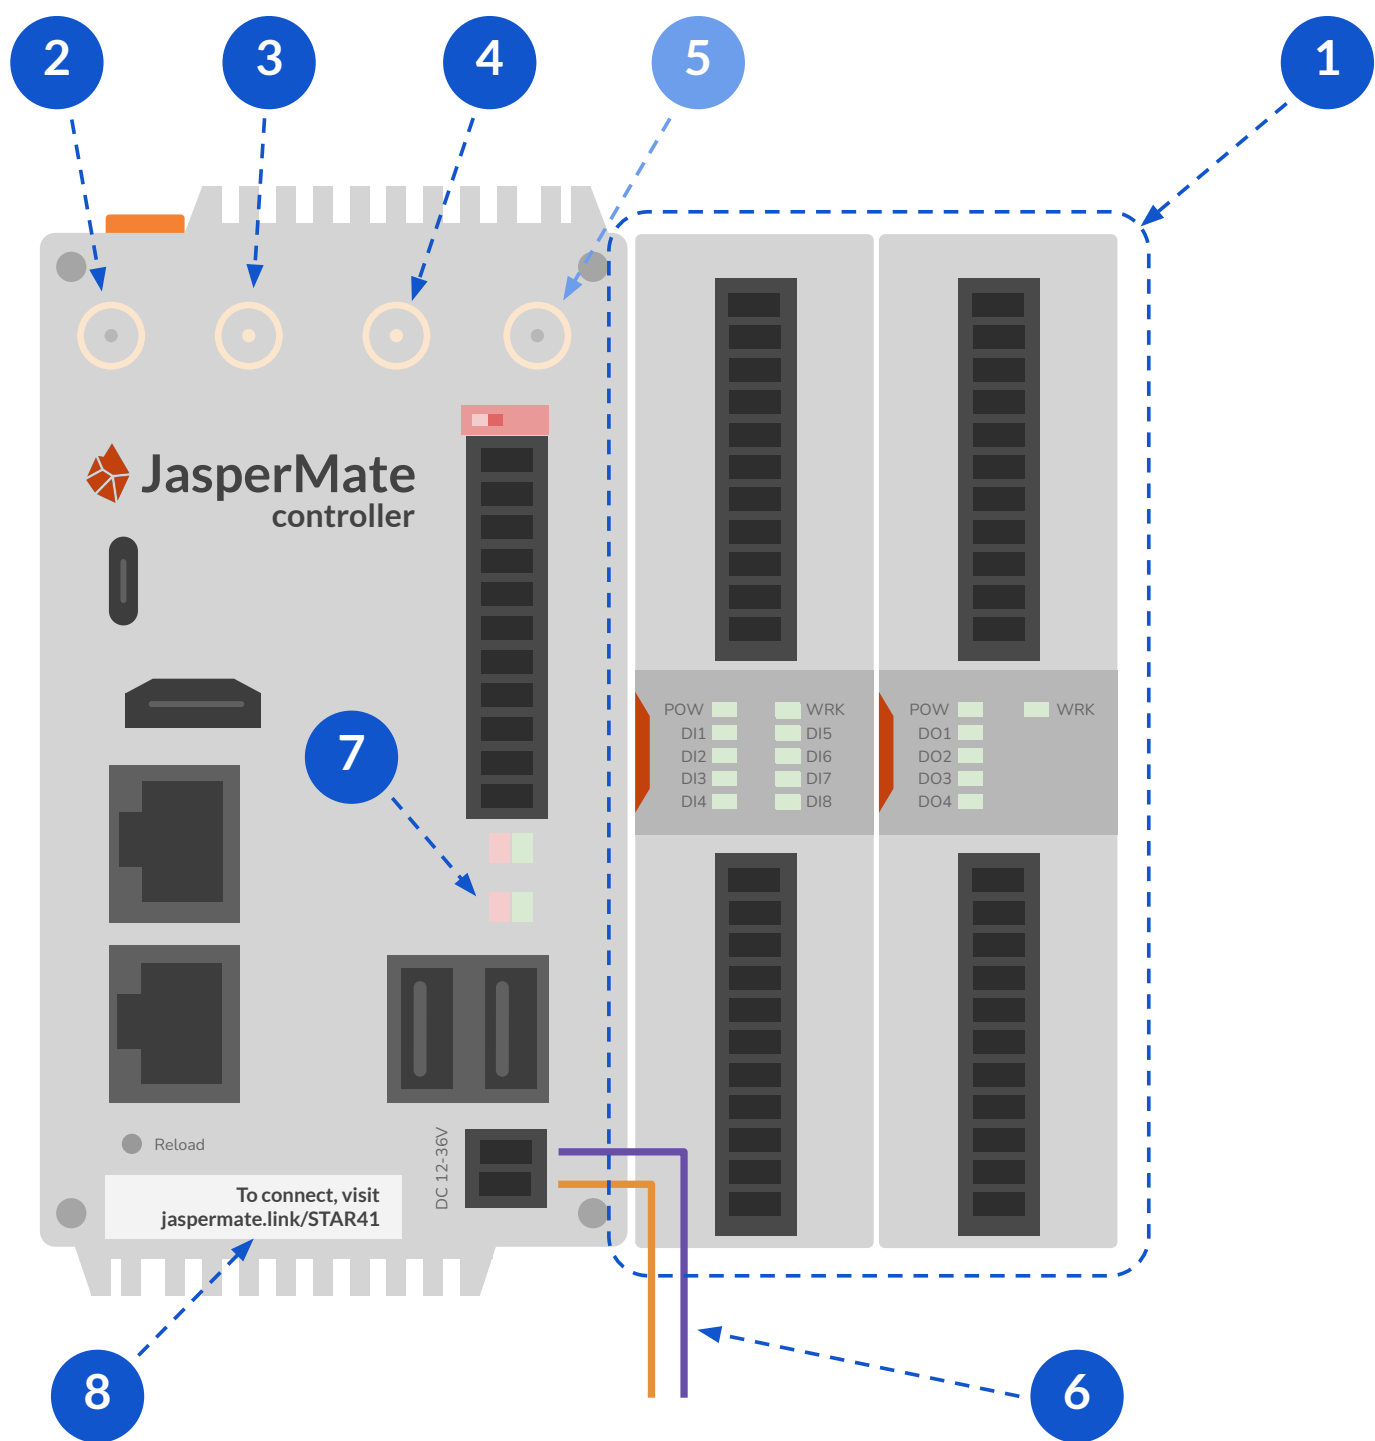

1. Slide the I/O cards onto the base unit, ensuring the I/O contacts are securely connected.
2. Attach the Wi-Fi antenna (female connector).
3. Attach the 4G antenna to ANT1 (male connector).
4. Attach the second 4G antenna to ANT2 (male connector).
5. Connect the GPS antenna (optional).
6. Connect the 12-36V DC power supply.
7. Ensure the red PW LED is on and the green WK LED is blinking .
8. Open a web browser and visit the setup page printed on the front label – it looks like jaspermate.link/STAR41

 2. Connect JasperMate to Wi-Fi

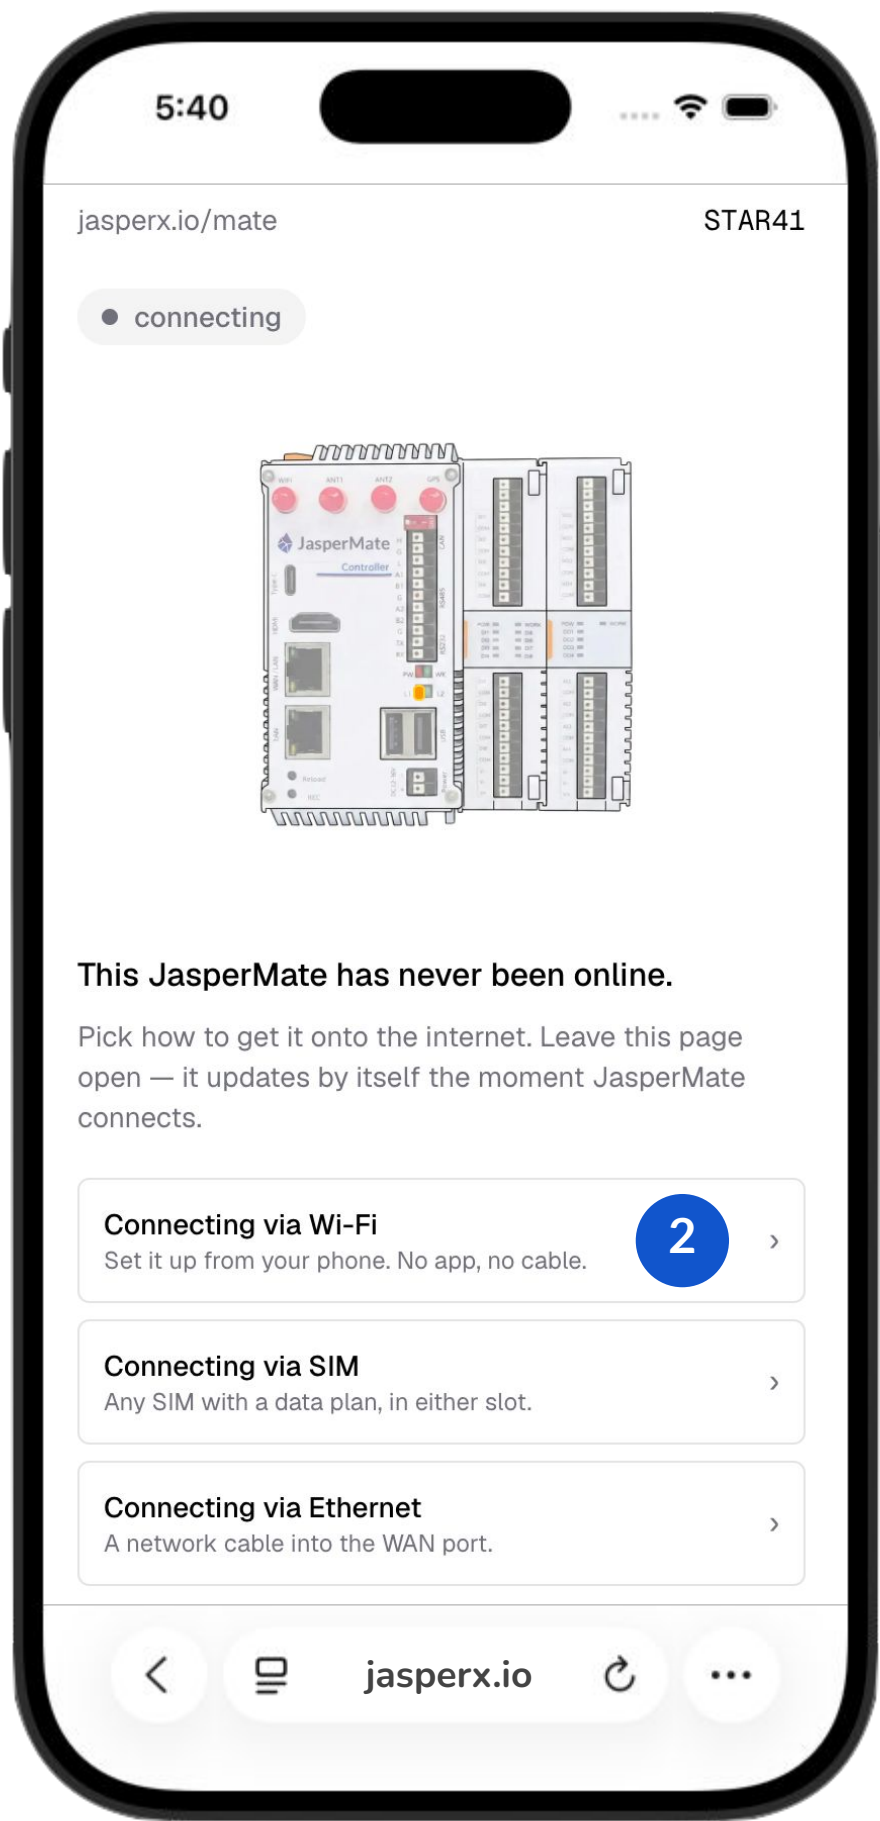


1. Move JasperMate near your Wi-Fi, or turn on the Personal Hotspot on your phone.

2. Follow the steps on the Mate’s web page to connect JasperMate to your Wi-Fi.


3. Wait until JasperMate is connected to the network: LED L1 goes off and LED L2 blinks.

4. On your phone or a computer, open the setup link [jaspermate.link/<jaspermate-id>](#) again.

 
5. Click "Connect Locally".

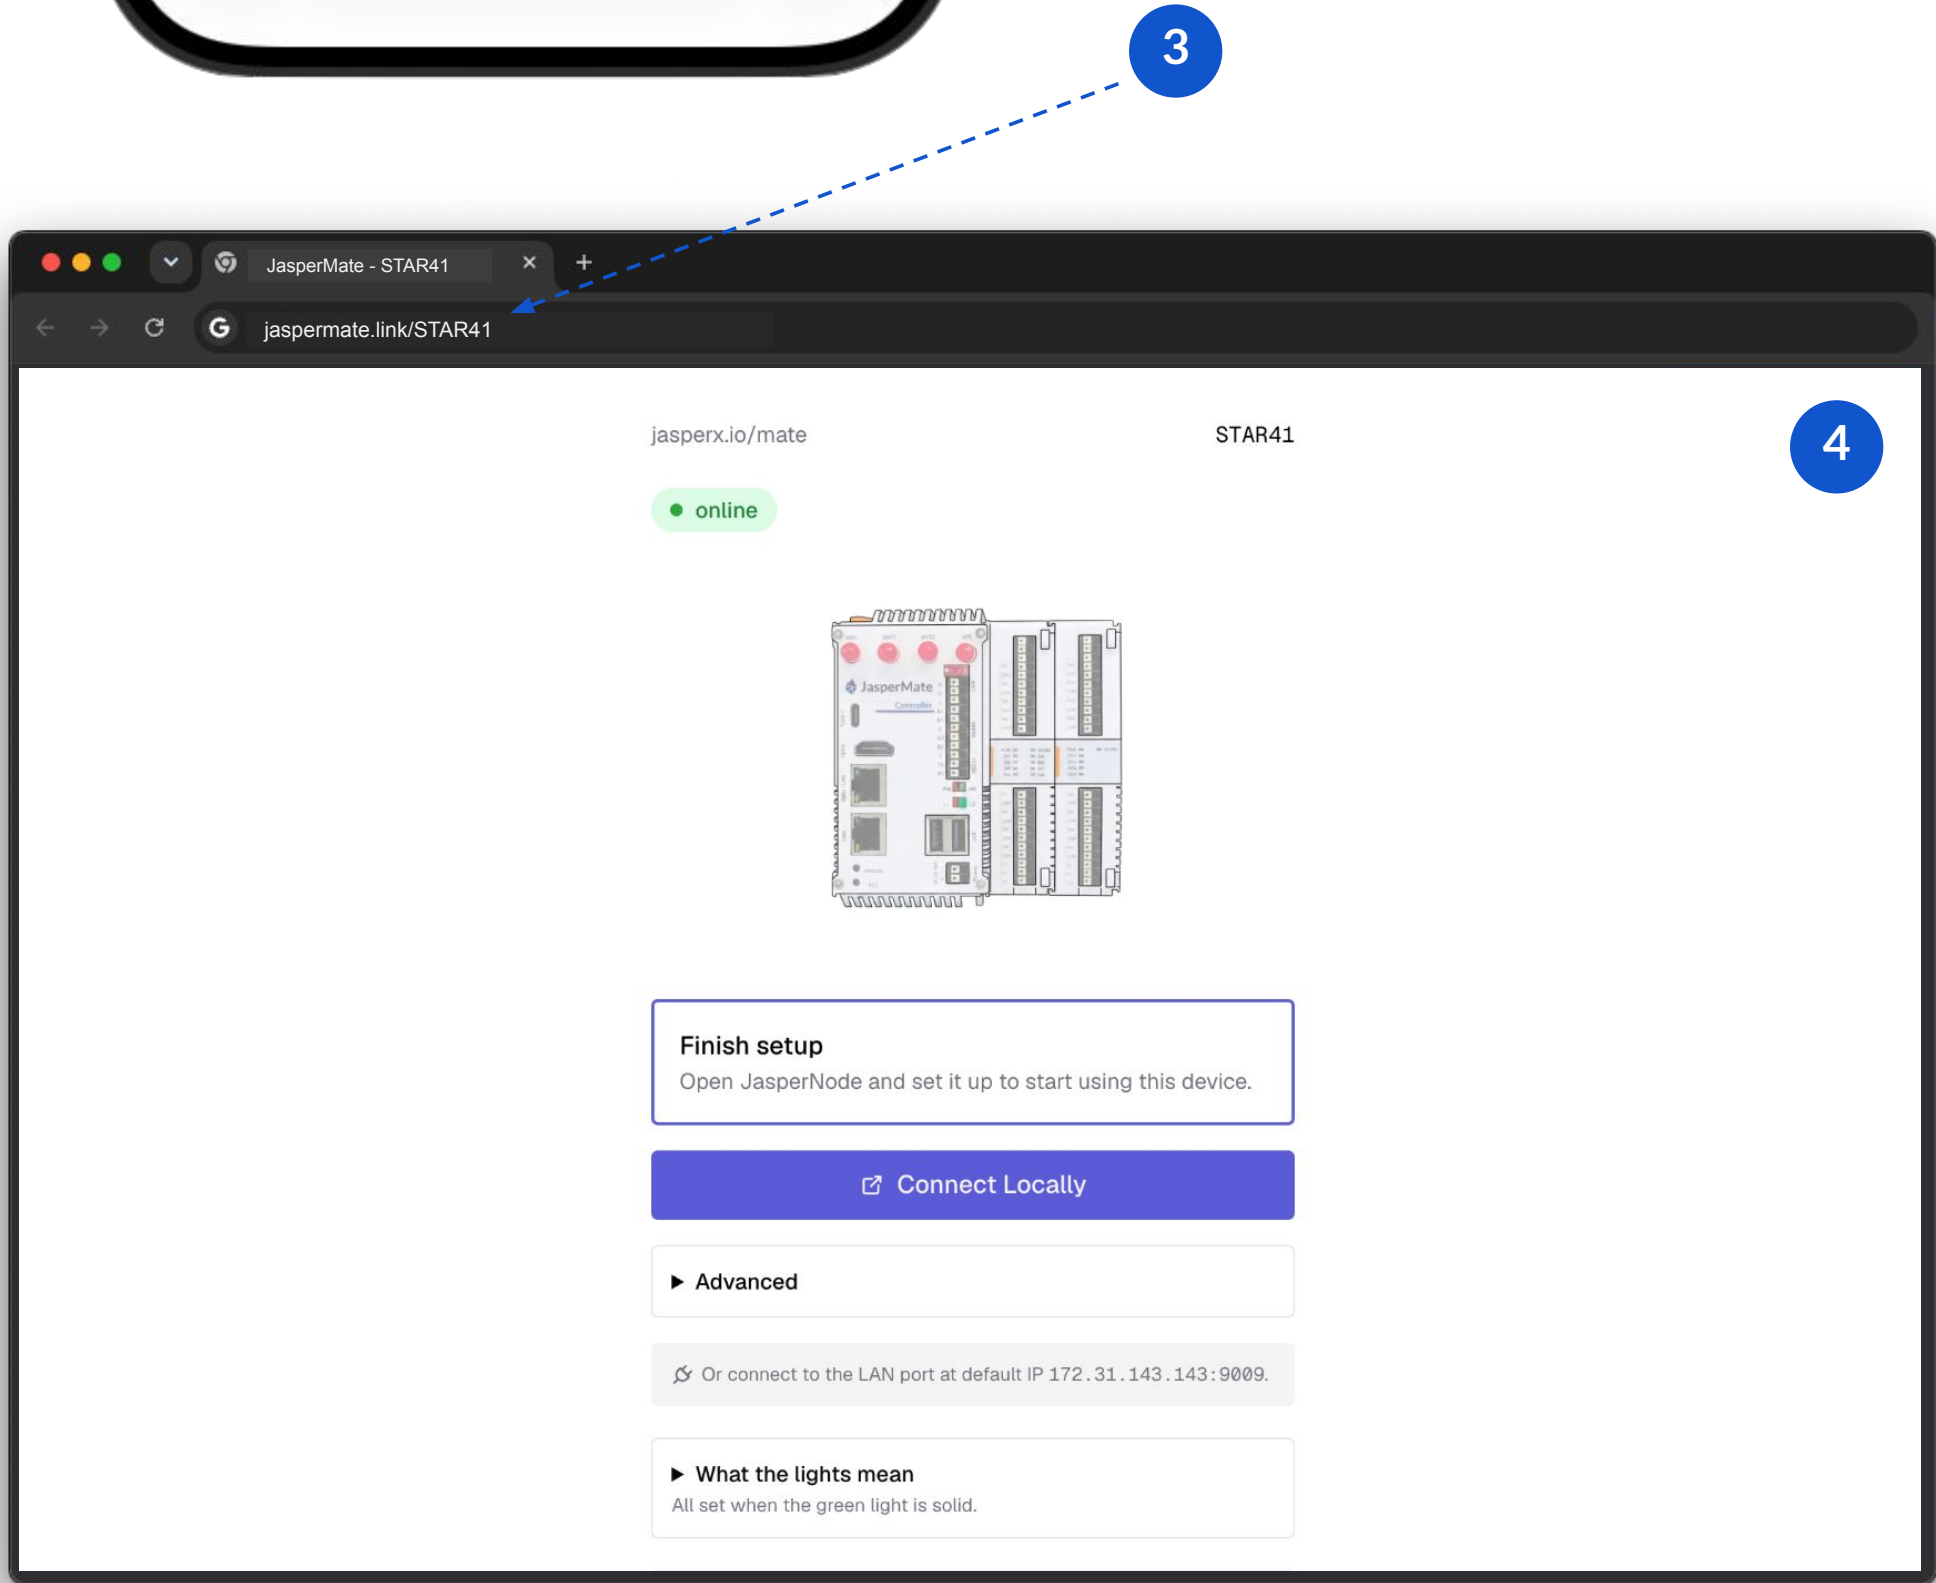

 
3. Log in and set up your project

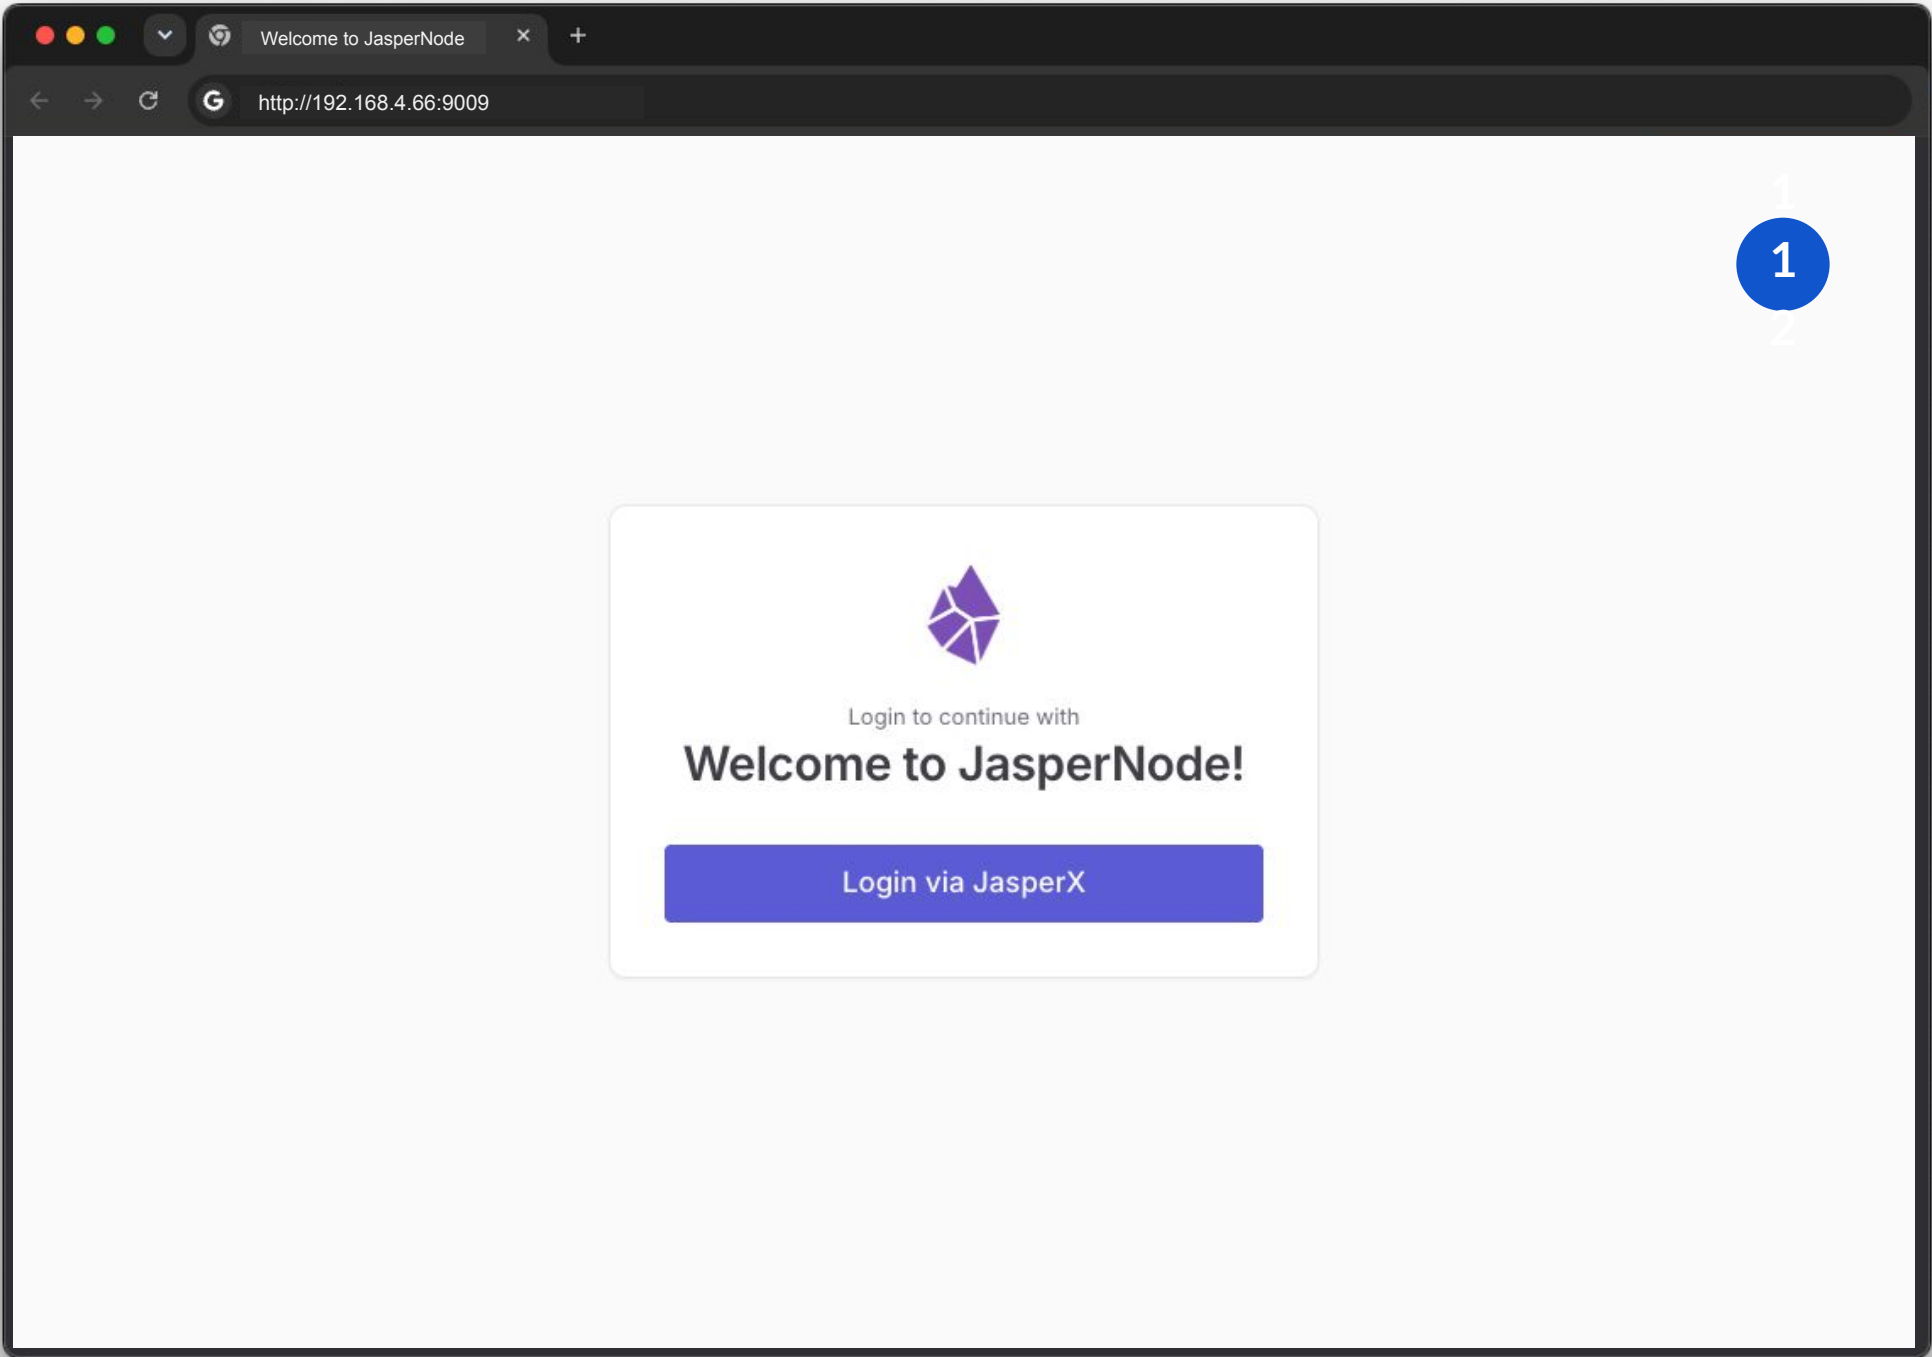

 - 1. Log in with your JasperX account. You may need to create an account if you don't already have one.
- 2. Give your JasperNode a name and description, then click Complete Setup.

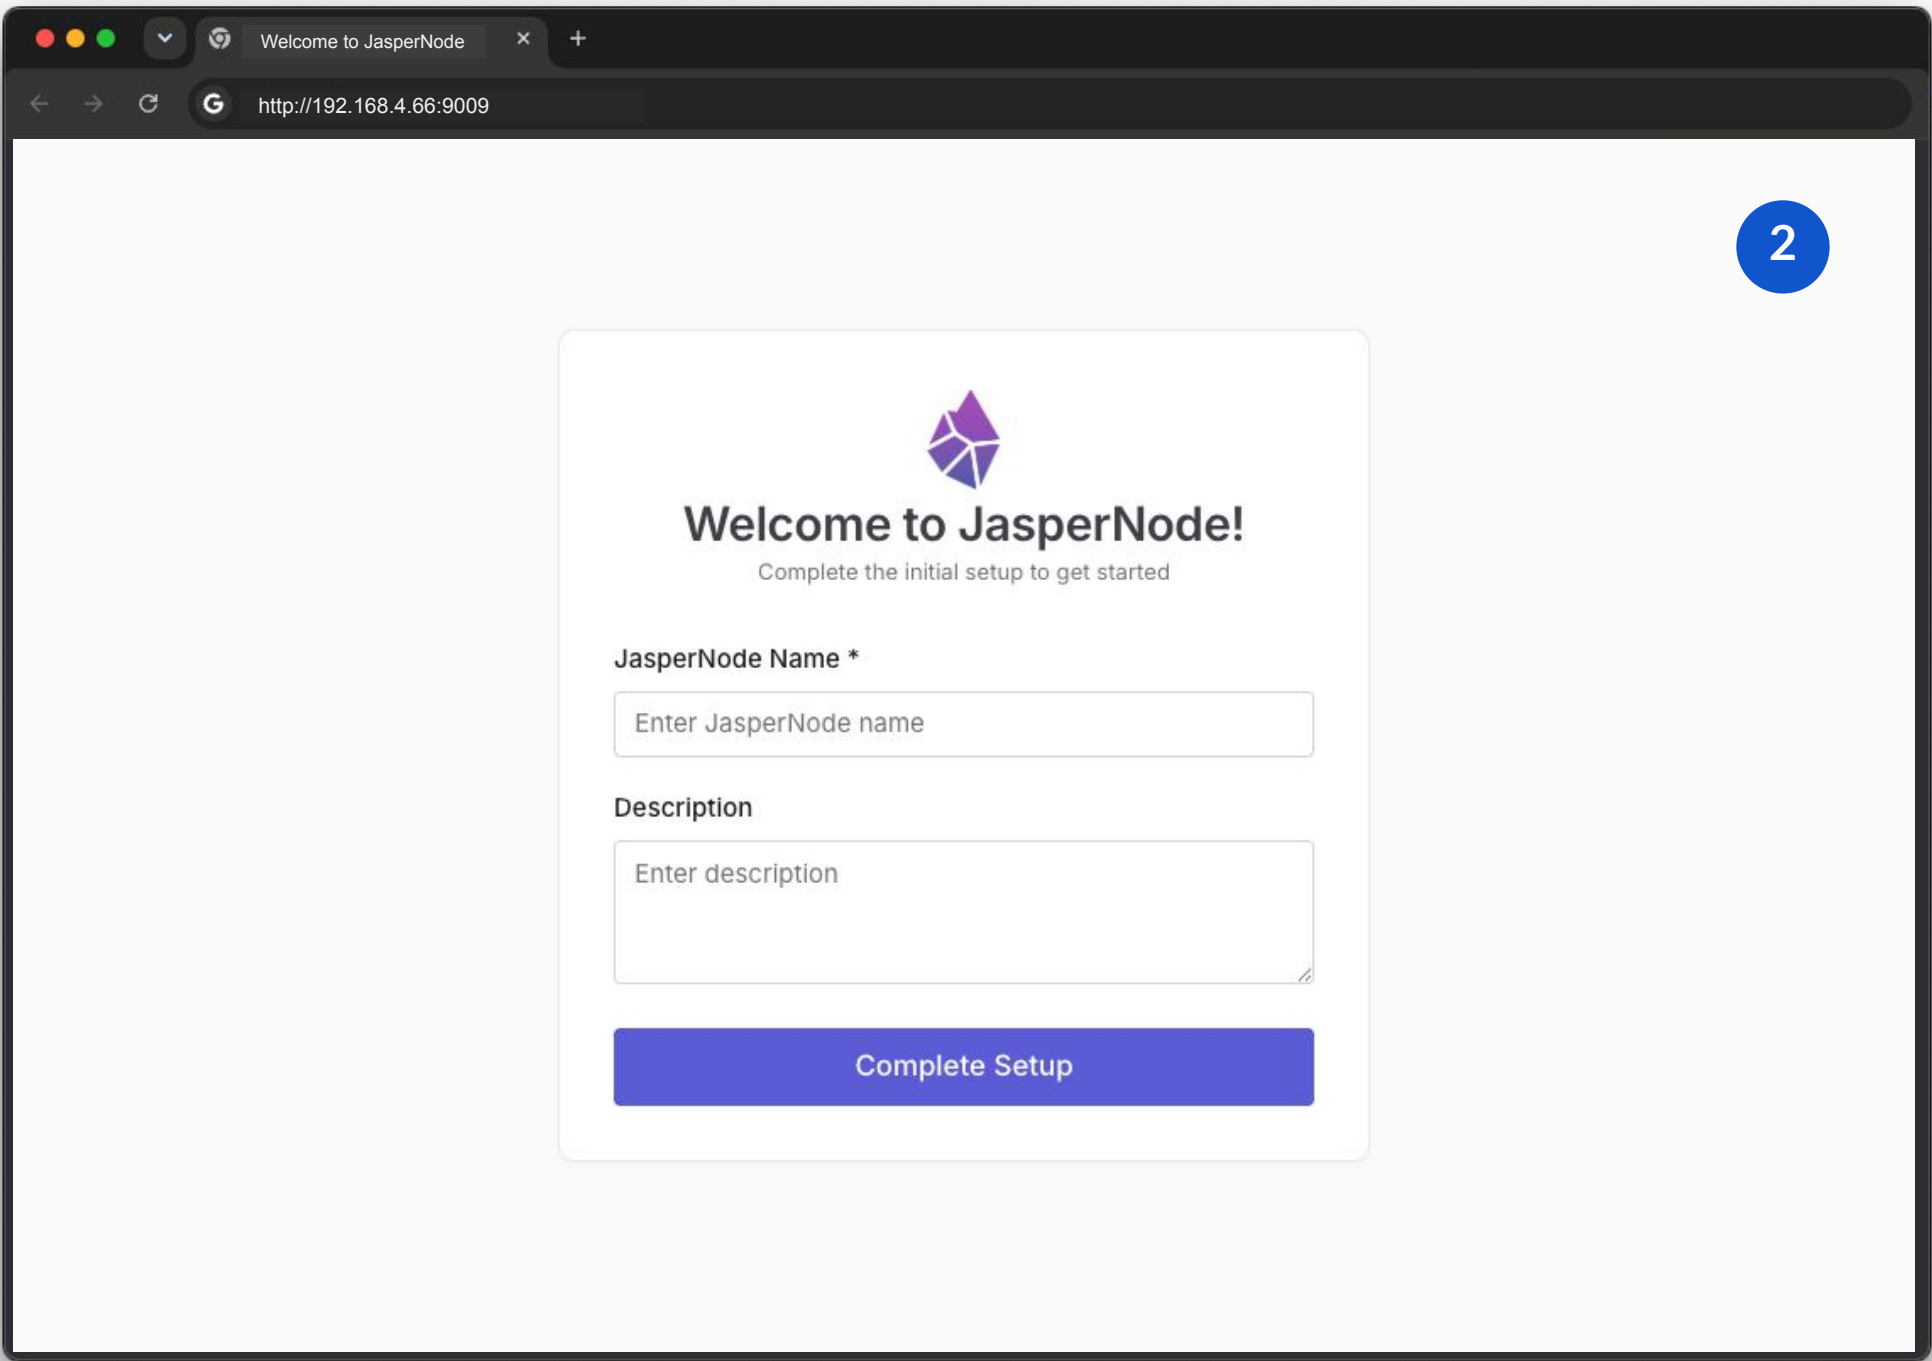

 4. Start with the AI chat window

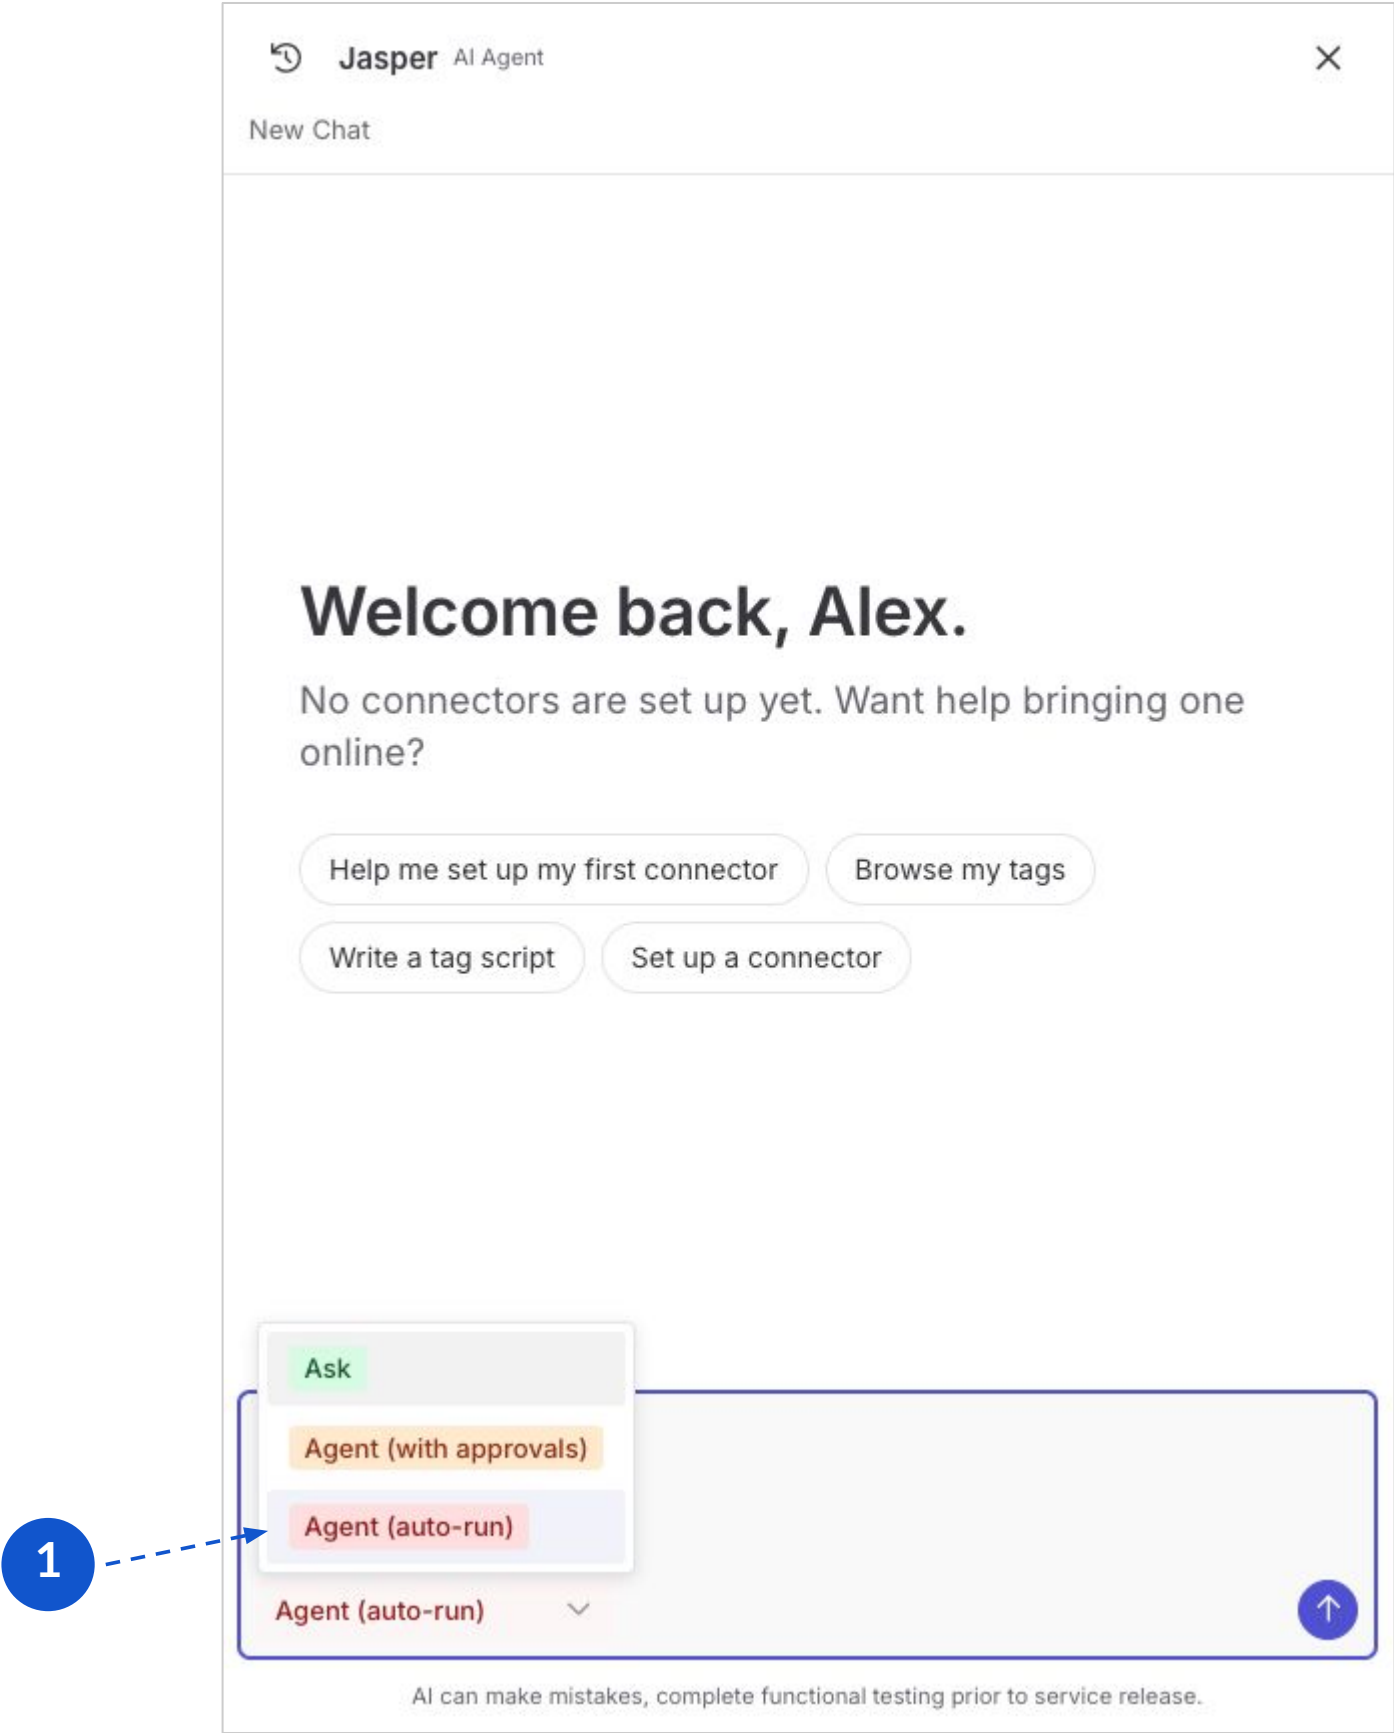

- 1. For the first run, set the agent to Auto-run mode.
- 2. Start with a basic prompt: "Blink output 1 every second".

